


Toad Ai606 Error Codes and Remote Button Functions

Toad Ai606 Remote Button Functions	
1	Arm system (lock doors if connected)
2	Disarm system (unlock doors if connected)
3 then 1	Silent Arm
3 then 2	Silent Disarm
1 then 1	Interior Sensor Bypass - 'Pet Mode'
1 for three seconds	Panic mode (sound alarm without doors locking)
3 and 4 together for three seconds	Accessory Output (if fitted)
4 for three seconds	Timed Accessory Output (if fitted)

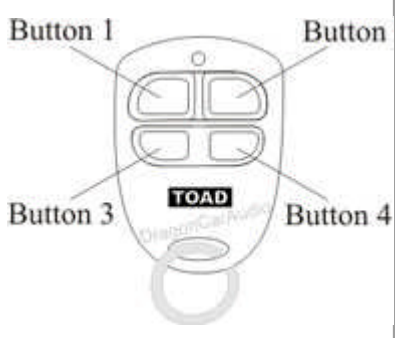

Interpreting LED Flashes and Status for Toad Alarms

No of Flashes	Explanation
RED - Slow flash	Car is armed
None	Car is disarmed
GREEN - Quick flash	Car is in the process of arming
GREEN - Solid	Immobiliser arming
RED - Solid	Immobiliser is armed

Toad Alarm Trigger Codes

Orange LED	Zone
Two Flashes	Optional Sensor
Three Flashes	Door Trigger
Four Flashes	Boot / Bonnet Trigger
Five Flashes	Door Trigger (car dependant)
Six Flashes	Ultrasonic Sensor
Seven Flashes	Ignition Trigger

Page last updated August 2012

© DragonCarAudio.co.uk - Permission given for forums and forum posts to link to this page.